



Product Reference Guide

Read and follow the instructions contained within carefully before use. Retain this guide in a safe and easily accessible place for future reference.




Drawings, pictures and specifications contained in this manual are for illustration purposes only – actual product may vary. VALCO BABY reserves the right to alter any specification(s), colour and/or features without prior notice or incurring any obligation to similarly alter products previously purchased.

valco
baby

Thank you for purchasing a quality VALCO product. Due to our policy of continuous product development, this model is constantly evolving. It is possible that some features or procedures outlined here have changed since this document was written. If you are unsure of any procedure outlined here please contact the store from which you purchased it to obtain the most up to date information, or contact us via the internet. See relevant web contact addresses on the back page.

Assembling / Opening your stroller

Remove the stroller from the carton and dispose of all packaging immediately. The rear wheels, front bar and hood all need to be installed prior to use.

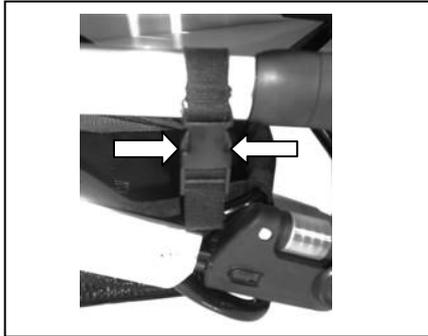

1. Release the frame locking strap by simultaneously pressing the two buckle sides in a pincer motion.



1. Lift the handle until you hear the frame lock into the open position.



1. Line up the rear wheel/brake assembly so that the brake bar is facing AWAY from the stroller.
2. Lift the rear assembly inserting the frame tubes and continuing until the assembly is securely locked into place.

Wheels and brakes




1. line the rear wheel pin with the rear axle housing



1. Insert the wheel pin into the housing.
2. Release the wheel lock and insert the heel as far as it can go.

ALWAYS test that the wheel is secured in the housing

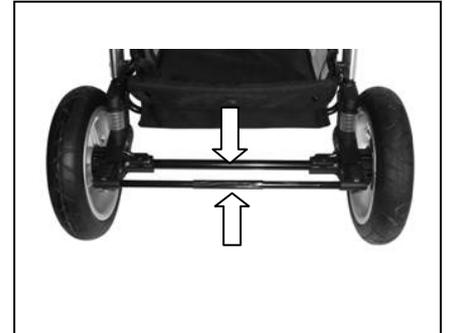

1. Press down on the brake lever to simultaneously engage the brake in both wheels.
2. To release, simply lift the lever with your foot.


ALWAYS test that the brakes are fully engaged by pushing the stroller forward and backward.

Front wheel operation

The wheels on your RAD stroller can swivel through 360° or be fixed in position:

1. To fix your wheel in position, turn each dial lock so that the centre line is VERTICAL.
2. To release your locked wheel, turn each dial lock so that the centre line is HORIZONTAL

ALWAYS ensure that BOTH wheels are set to the same action.

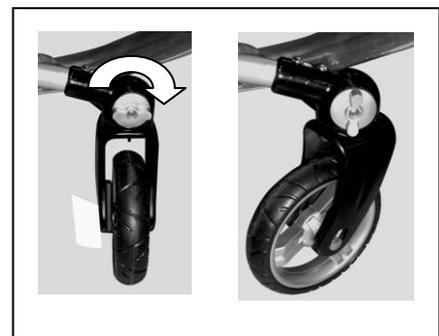

IMPORTANT WARNING: Always test that the wheels and/or brakes are securely engaged before use.

Your seat section




1. Line up each of the seat connectors with the corresponding housing located on either side of the stroller frame.
2. Insert the connectors into the housing until the seat is securely in place.




To remove the seat or face it in the opposite direction:

1. Simultaneously press both grey buttons located on either side of the seat unit and lift the seat unit from the frame.


NEVER remove the seat with a child in it.

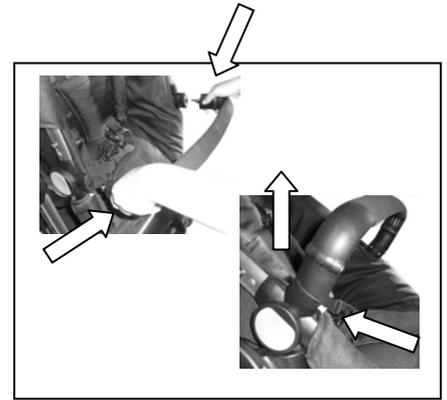


1. Insert the two bumper bar pins into the housing located in the side connectors of the seat.
2. To remove the bar, press on each of the buttons and lift the bar out of the housing. Your bar can also operate as a "gate" by opening only one side!

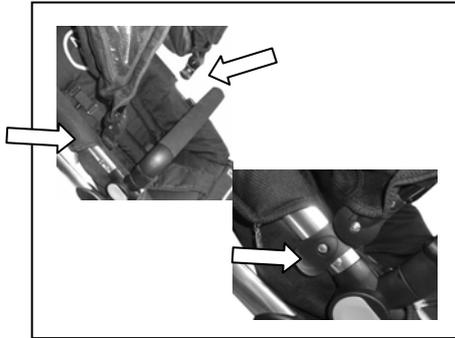

1. To install your hood, place each clamp around the seat tube so that the locking rivet is located in the centre of the plastic clamp.
2. To remove, lift each clamp over the locking rivet and lift off the canopy.

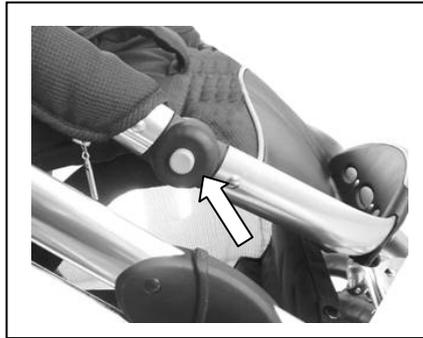


1. To adjust your footrest, simultaneously press the two adjusting buttons on either side of the footrest and move it up or down to the desired position.

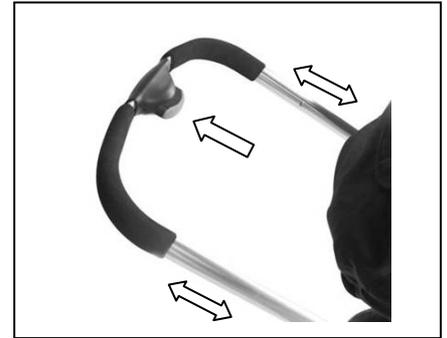

1. Your handle can be adjusted to multiple positions.
2. Press the centre locking button while simultaneously moving the handle up or down.
3. Releasing the locking button will allow the handle to lock into the next available handle position.

Using your harness

Your stroller is fitted with a multi point safety harness system. Your child **MUST** always be harnessed while in the stroller.

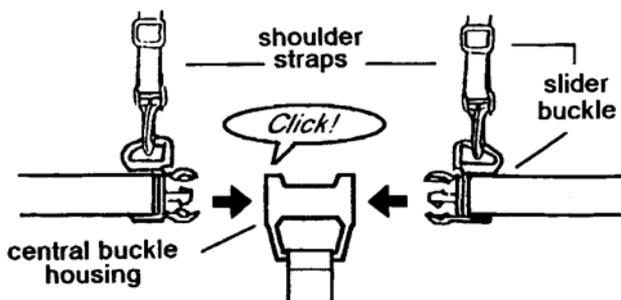


1. Insert Buckles (A) and (B) into either side of the Buckle Housing (C). Keep inserting until they click into place securely.
2. Carefully adjust the harness straps to snugly fit your child by adjusting the Sliders (D) located on all Shoulder Straps, Waist Straps and the Crotch Strap.
3. To open the harness, release the Buckle Prongs by squeezing on the top and bottom prongs simultaneously and pull apart from the Buckle Housing.

This process may be difficult, as your buckle system has been designed to meet very stringent safety standards to ensure that a child cannot release the harness unaided.

The harness should be snugly fitted to the baby's body, tight enough so that the baby cannot wriggle itself free of the straps but loose enough so as not to cause the baby any discomfort.

IMPORTANT WARNING: Always check that all chassis hinges are securely engaged before use.

Folding your RAD

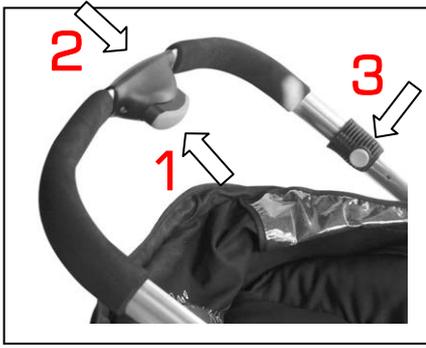


Your RAD stroller can be folded with or without the seat unit in place.

1. Squeeze the frame lock button.
2. While keeping the button depressed push the handle all the way inward until you feel resistance by the secondary lock.
3. Press the grey button to release the secondary lock and continue to push the handle downward until you feel the frame release.



1. Gently lower the handle to the floor.

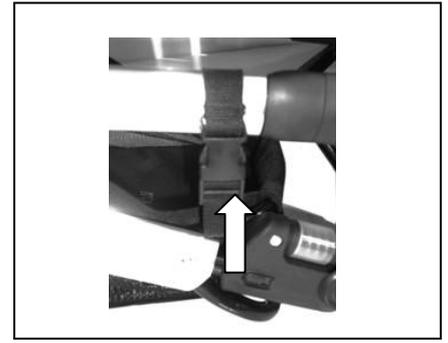

2. Lock the frame using the frame lock strap

! WARNINGS !

Your child's safety is your responsibility

Be sure to check that all hinges, clamps and buckles are securely fixed and in place before use.

Check all parts for breakage or fatigue before use. Discontinue **immediately** if any part is found to be damaged or broken.

The **maximum** weight of the child for which this stroller is intended is 20 kg's (44 lbs) and height of 96 cm (38 in)

Exceeding the recommended load may cause this unit to become unstable.

Care **MUST** be taken when folding the stroller to prevent finger entrapments.

Can be used from 6 months +. A bassinet specially designed to be used with a stroller is recommended when using this stroller for a newborn.

NEVER jog with a newborn baby in any pram or stroller.

ALWAYS ensure that the child is clear of all moving parts when adjusting the stroller.

ALWAYS engage the brake system when the stroller is at rest.

NEVER leave any child unattended in the stroller.

NEVER use on escalators or stairs.

When in the stroller the child must **ALWAYS** wear the safety harness, correctly fitted and adjusted, at all times.

DO NOT hang shopping bags from the handle as this may affect the stroller's stability.

Always use the basket provided, the **maximum** weight in the basket is 6 kg's (13 lbs)

Do not carry additional children. It may be unsafe to use any accessories other than VALCO approved ones.

ALWAYS be aware of the risks provided by fire and other significant sources of heat such as radiators etc. which may be in the immediate vicinity of your stroller.

This product is intended for domestic use only. It is not intended for commercial use.

Continued and extended exposure to sunlight and the elements can change the colours of many materials. To avoid fading, always cover and store in a shaded area.

Caring for your stroller

Moving parts may be lubricated with silicone based lubricants – do not use oil. Fabrics can be hand washed using a mild detergent.

valco
baby

In Australia/NZ

www.valco.com.au
www.valco.co.nz

In North America

www.valcobaby.com
1 800 610-7850